



Cisco/Linksys RV0xx Configuration for TeleVoIPs

Follow the directions below to ensure proper configuration and QoS settings for the Cisco Small Business RV042, RV082, or other RV0xx series routers. Please understand, instructions may vary based on the model and firmware version of your device.

I. General Information & Known Issues

The Cisco/Linksys RV0xx series routers have a hidden UDP timeout setting.

II. Required Changes

1. Navigate to https://<RouterIP>/f_general_hidden.htm
2. Disable SIP ALG
3. Set UDP timeout to 300.
4. Press **Save**.

