




How to Plug in your Cordless Phone

First, plug in the DECT base:


- 1) Attach stand to the DECT base.
- 2) Plug the Ethernet cord into the DECT base first. Make sure the other end is connected to the Internet by plugging it in to your Internet router, **DO NOT** plug in directly to your modem.
- 3) Plug in the power cord.

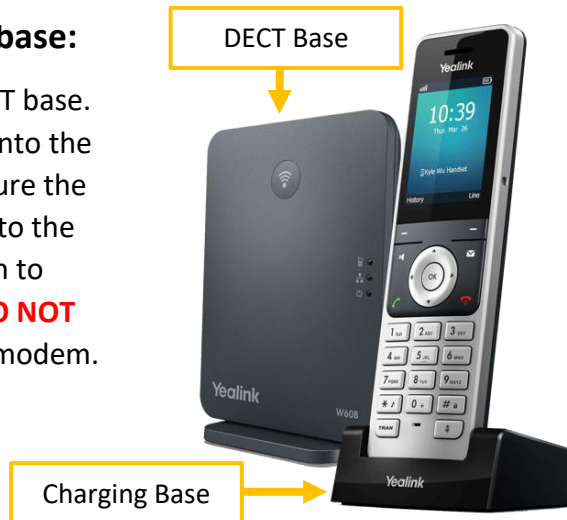

Then, plug in the phone:

- 4) Plug in the charging base.
- 5) Let cordless phone charge on base before use.
***If battery is separate in the box, remove back cover plate of the cordless phone to insert base. The whole black back plate is removed to insert battery.*
- 6) Make a call to 813-906-6006 to activate your phone.

Pairing additional cordless phones – The initial cordless phone should already be paired with your DECT Base. Any additional phones needing to be paired will need to follow the following steps.

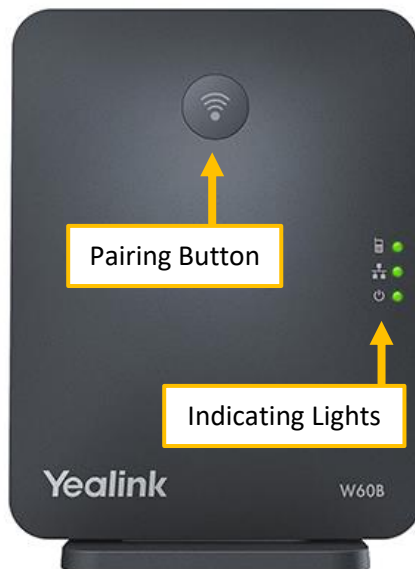

To pair an extra phone:

- 1) Make sure the new phone is charged and ready for pairing.
- 2) Hold down the Pairing Button on the DECT Base until the indicating light starts flashing.
- 3) Select Register Handset on the cordless phone.
- 4) Select the desired base and then press the OK soft key.
- 5) Enter the base PIN (the default it is: "0000").

***IMPORTANT:** When plugging in your cordless phone, every part has a specific purpose. If the DECT Base is not plugged in before the cordless phone, there will be no service. Or, if an additional cordless is ordered, it needs to be connected to an existing DECT Base.